



www.wunder.it

BABY PORTABLE HEIGHT ROD MOD. WH80



🕂 Read this manual carefully before using the instrument

INDEX

1. TECHNICAL SPECIFICATION AND INSTALLATION	2
2. INSTALLATION OF MECHANICAL ROD	2
3. HOW TO MESURE A BABY	3

🖄 <u>warnings</u>!

Operators must read this manual carefully, comply with the instructions it contains and become familiar with the correct use and maintenance procedures of the instrument.

- Retain this manual for consultation and as a help in staff training.
- For a better and longer life of the product it is good to periodically perform a thorough general cleaning.
- The instrument must be cleaned with a soft cloth, dampened with water or neutral detergent, avoiding the use of solvents or abrasive substances.
- In case of prolonged use of the instrument, remove the batteries from the terminal.
- During transport, be careful not to subject the instrument to shocks or excessive mechanical stress.
- In case of repair or assistance, contact your dealer or an authorized service center by contacting service2@wunder.it or sales@wunder.it


1. TECHNICAL SPECIFICATION AND INSTALLATION

TECHNICAL SPECIFICATION


MEASUREMENT RANGE	35~80cm
DIVISION	1mm
SIZE	W87 x L30 x H7cm
WEIGHT	700g

2. INSTALLATION OF MECHANICAL ROD


For the installation of mechanical height rod proceed as follow:

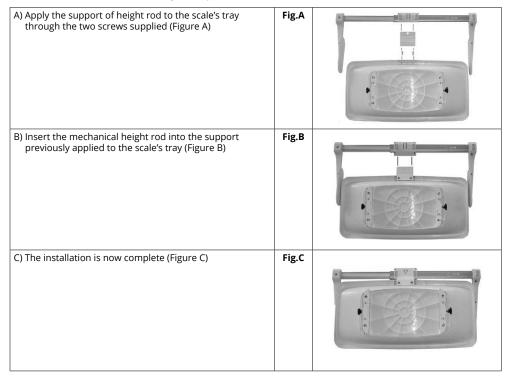

3. HOW TO MESURE A BABY

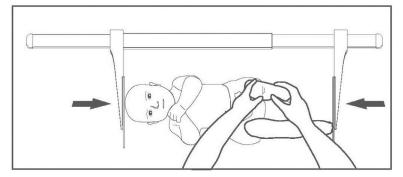

- 1. Lightly press head stop against baby's head
- 2. Straighten baby's feet

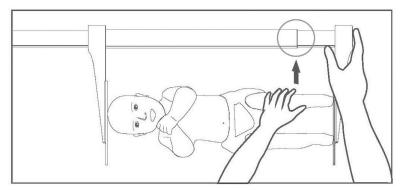

- 3. Sliding right head stop left until it touches baby's feet
- 4. The height of the child is read at the red line on the statimeter



Wunder Sa.Bi. S.r.l.

Via Vecchia per Monza, 20 20056 Trezzo sull'Adda (MI) Tel. +39 02 90964566 www.wunder.it