

TERMOFORO (CON COPERTURA) HEATING PAD (WITHOUT COVER COUSSIN CHAUFFANT AVEC COUVERTURE ALMOFADA DE AQUECIMENTO COM FRONHA HEIZKISSEN MIT HÜLLE ΘΕΡΜΟΦΟΡΑ ΜΕ ΚΑΛΥΜΜΑ PODUSZKA ELEKTRYCZNA Z POSZEWKĄ VYHŘÍVACÍ DEČKA S KRYTEM SĂCULEŢ ÎNCĂLZITOR CU HUSĂ VÄRMEDYNA MED FODRAL WARMTEMAT MET AFDEKKING LÄMPÖTYYNY SUOJAN KANSSA

REF SS03N(42*63)S (GIMA 28671)

gima@gimaitaly.com - export@gimaitaly.com

www.gimaitaly.com

Fabbricante / Manufacturer / Fabricant / Fabricante / Hersteller / Κατασκευαστής / Producent / Výrobce / Producent / Producent / Tillverkare / Valmistaja **Dongguan Sunbright Electric Appliance Co., Ltd.** No. 102, Shangdong Yiheng East Road, Qishi Town, 523455 Dongguan City, Guangdong Province, China Made in China

Importato da / Imported by / Importé par / Importado por / Importiert von / Εισάγεται από / Importowane przez / Importováno / Importat de / Importerad av / Geïmporteerd door / Maahantuoja: Gima S.p.A. Via Marconi, 1 - 20060 Gessate (MI) Italy



128671-Rev.0-05.23

፼ GIMA

ENGLISH

Instruction Manual SS03N(42*63)S

IMPORTANT INFORMATION! RETAIN FOR FUTURE USE! Read the instruction manual carefully before using this device, especially the safety instructions, and keep the instruction manual for future use.

Should you give this device to another person, it is vital that you also pass on these instructions for use.

This instruction manual belongs to this device.

It contains important information about starting up and operation. Read the instruction manual thoroughly.

Non-observance of these instructions can result in serious injury or damage to the device



WARNING

These warning notes must be observed to prevent any injury to the user.



CAUTION

These notes must be observed to prevent any damage to the device.



NOTE

These notes give you useful additional information on the installation or operation.

Class II applied



Product complies with European Directive



Follow instructions for use



Product code



Caution: read instructions (warnings) carefully



Lot number



WEEE disposal



Do not puncture the heated cushion!

Do not use the heated cushion when it is folded!



Not to be used by very young children (0-3 years)!



Only use the heated cushion indoors!



Machine wash 30°



Do not chlorinate!



Do not dry the heated cushion in a tumble drier!

The cushion cover may not be put in a dryer!



Do not iron the heated cushion!

You may iron the cushion cover at a low temperature!



Do not dry clean!

SAFETY INFORMATION

• xamine the appliance frequently for signs of wear or damage. If there are such signs, if the appliance has been misused or does not work, return it to the supplier

beforeswitching it onagain.

• B fore connecting the device to your power supply, please ensure that the supply voltage stated on the rating plate is compatible with your mainssupply.

• Do not old or crease the heat padduringuse.

• Neither pie ce the pad with, nor attach safety pins or other spiky or sharp objects

tothepad.

• Do not use the d vice on children or persons who are disabled, asleep or insensitive to heat (persons who cannot react on overheating).

• Child en below the age of 3 years are not allowed to use this device, because they are not able to react over heating.

• This appliance an be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the applianceinasafewayandunderstandthehazardsinvolved.

• Child en shall not play with the appliance.

• Cleaning and user mai tenance shall not be made by children withoutsupervision.

• N ver use thepadunsupervised.

• The appliance an be used by children older than 3 years and younger than 8 years under supervision and with the control always setto minimum temperaturevalue.

• The able and control unit of the appliance can give rise to risks of entanglement, strangulation, tripping or treading if not correctly arranged. The user shall make sure that excess ties and electric cords shall be arranged in a safeway.

- The d vice is only for private use and is not to be usedinhospitals.
- Dono allasleepwhiletheheatpadisswitchedon.

• P olonged use of the heated cushion at a high setting could lead to skinburns.

• Do not over the pad with any other cushions. The control switch should not be

2

፼ GIMA

covered or placed on or below the pad while the unit is inoperation.

• Do not sit on the heat pad. Instead, rest the pad on or against the part of the body to be. The intended use of the is to only back and neck.

• Never touch a heat pad that has fallen into water. Unplug the unit from the mainsoutletimmediately.

• Keep the mains lead away fromhotsurfaces.

• Never carry, pull or turn the heat pad by the mains lead and do not let the leadgettangled.

• Do not use the heat pad when wet and only use it in dry environments(notinthebathroomorsimilarenvironments).

• The controls and leads must not be exposed to any kindofmoisture.

• If a fault occurs, do not attempt to repair the unityourself. Repairs must only be carried out by an authorized specialist dealer or other suitablyqualifiedpersonnel.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons inorder to avoidahazard.

• A damaged power supply cable must be replaced with a power cable of thesametype.

• Heat pad may only be operated with the control unit (SSO3) supplied.

• When storing the heat pad, allow it to cool downbeforefolding.

• Should you have any concerns about health issues, consult your doctor before using theheatpad.

• Do not use the heat pad on parts of the body that are swollen, injuredorinflamed.

• Should you experience persistent pains in the muscles and joints, please inform your doctor. Persistent pains can be a symptomof Seriousillness.

• If you experience any pain or discomfort while using the unit, stop usingitimmediately.

• Do not crease the appliance by placing items on top of it during storage.

• Do not use ifwet

• When the appliance is likely to be used for an extended period, for instance by the user falling asleep, controls should be adjusted to position1.

OPERATION

Plug the unii inia the mains outlet and move the slider contrai from position O to position 1. The power LED will light up in . After a few minutes you will be able lo feel the pad getting noticeably warmer. If you require a higher temperature setting, move the switch lo the next positions 2, orto the maximum heat setting, position 6. If the pad gets tao hot far you, move the slider back lo position 2 or 1, After a short while the heating pad cools down noticeably. To switch the unii off, move the switch back lo position 0. The power LED will go out, indicating that the unit is switched off. Unplug the unit from the mains outlet. The heat pad will switch off automatically after apprax. 90 minutes of continuous use. To switch it back on again, move the slider contrai lo position O and then back lo the desired heat setting. Unplug the unit from the mains outlet once you have finished using it.

CLEANING AND MAINTENANCE

Heat pad

• Before cleaning the pad, unplug it from the mains outlet and let itcool down for at least ten minutes.

• The heating pad is equipped with a detachable cable. Disconnectthe plug and remove the cable from the heatingpad.

 \bullet The heating pad can be machine washed at 30° in a delicate programme or by hand gently. The best way to do this is to put the heated.

- Rinse the heating pad several times to remove all thedetergent.
- Store the unit in a clean and dry piace, laid out flat with nothing covering or resting on top ofit.
- Only use the appliance once it is completelydry

GIMA WARRANTY TERMS

The Gima 12-month standard B2B warranty applies



Disposal: The product must not be disposed of along with other domestic waste. The users must dispose of this equipment by bringing it to a specific recycling point for electric and electronic equipment.